

Table of Contents

Getting started

Spreadsheet

CSV API

Changing credentials

Adding nodes

Deleting nodes

Jobs

Templates

A vendor agnostic example explained

Template examples

Template in jobs

3

3

3

4

4

5

6

8

9

9

10

Getting started

Great, you've downloaded the NetYCE VM and welcome to our automation framework.

(It is assumed you've installed the VM and are able to access it using the browser. If not the case, please check out the [VM installation guide](#))

This guide will explain how to start with NetYCE. First we will make sure you can change the necessary settings to communicate to your nodes, adding those after which we will dive into jobs and templates.

The modeling around this has already been done. This is in the Design section of the tool.

Spreadsheet

In order to manipulate the database of NetYCE easily, a spreadsheet can be used instead of writing API calls yourself. This provides an easy/lazy way to call the API, called the CSV API. A spreadsheet has been created as a template. The next chapters will use the contents of this spreadsheet.

Download:

netyce_yce_nodes.xlsx

Download:

netyce_api_cmdb_nodes.xlsx

Color coding

Orange: Values to use the correct service task (no changes required)

Green: Mandatory variables (Make sure they are filled with your variables)

CSV API

The CSV API can be found at **Operate > Service config > CSV API**. It is already filled with some explanation and examples on how to use it.

The downloaded spreadsheet already has the correct syntax which can be copied into the text area. There is no need to provide commas or delimiters yourself, this is automatically understood by the tool.

Each line will be an action. You may provide as many lines as desired.

Copy the desired lines into the text form and press next. An overview is given for the lines found and will show which variable has been assigned which value. Press next to continue and adding the information.

YCE CSV API

NetYCE support (System) of NetYCE

YCE CSV API commands

Enter the API commands in csv format in the box below.

Auto-detects the field-separator (tab,comma,bar,semicolon), do not quote

```
addNode YCE LAB api addNode R1 Cisco IOS 10.10.112.10
addNode YCE LAB api addNode R2 Junos 10.10.112.11
```

But first, let's fill the sheet with information.


Changing credentials

Let us set the username, password and an enable password before we add nodes. These credentials will be used to communicate with the devices.

The credentials are stored in the Domain. Every node that is linked to the Domain will use these credentials.

This spreadsheet can be used to modify the information, but it is also possible to do this in the GUI.

To do so, open Build > Domain, select the YCE domain and change Default_enable_secret on the Management tab, Rme_user and Rme_passwd on the Users tab.

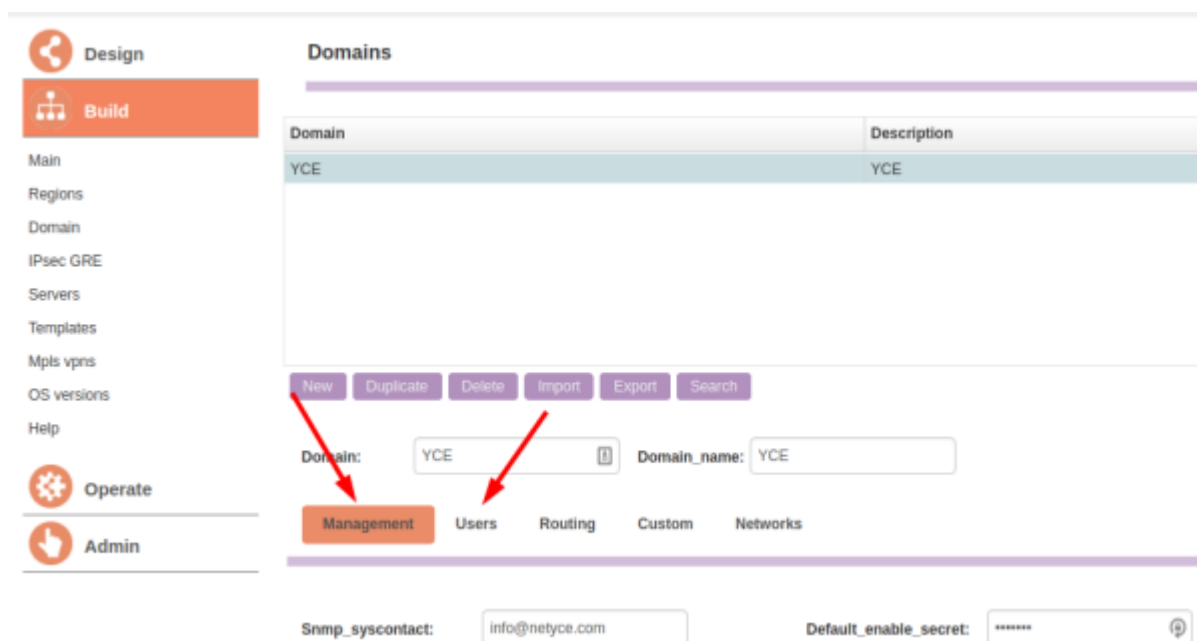

Adding nodes

Adding nodes to the NetYCE database is just as easy. Make sure all green columns are filled with your variables and the lines into the CSV API.

Nodename

This will be the hostname of the node.

Vendor_type

This will be the vendor of the node, specifically mentioning the family if needed. A few example, which are also shown as comments in the spreadsheet:

- Cisco_IOS
- Cisco_XE
- Cisco_XR
- HP_C7
- Huawei_S
- Junos

If you are missing a specific vendor, please let us know and we'll make sure you are able to continue to test/use our product.

mgmtip

Provide the IP that you wish to assign to the node.

Deleting nodes

Deleting any node can be done using the GUI as well as the API. To use it from the GUI, go to Build > Main and select the Client. Either drill down using the Site or select the node directly in the bottom.

NOTE Deleting the node only, will not delete the linked Service. While deleting the service will also delete the node. (Recommended) Please delete the service associated with this node.

Design

Build

Main

Regions

Domain

IPsec GRE

Servers

Templates

Mpls vpns

OS versions

Help

Operate

Admin

YourLab

Client code	Client type	Client name
lab1	YCE	Demo Client type
YourLab	YCE	

New Edit Delete Graph Search

Search:

Sites **VPN**

Site code	Site type	Address
YourLab	LAB	Closet 1

New Edit Delete Graph Search

Nodes **Services**

Site	Service	# Nodes	Nodes
YourLab	R1	1	R1

Edit Delete Search

Using the API is as easy as pasting the line from the spreadsheet using the desired hostname.

Jobs

Jobs are short for Command jobs which are used to communicate to one or multiple nodes. Command jobs are available at Operate > Node config > Command jobs.

Here you can type the hostname directly to add it to the list, or use the clientcode to drill down. Make sure that at least one node is added to the list and go to the next page.

Node config: **Command jobs** Basic cmd jobs Port config Startup confi

Push Command jobs

NetYCE support (System) of NetYCE

Clients/Sites/Nodes list

items should be separated
(comma, space, semicolon, newline)

Add list

Clientcodes
lab1
YourLab

>>
<<

Selected Nodes (1)
R1

Next

Here you'll see the following:

- a list of nodes, which also shows the Vendor and family
- a list of saved jobs
- a commands section
- a scenario section
- the scheduler section

To push a *simple* configuration change, you just have to do the following:

1. Select the desired node
2. fill the desired command(s) in the commands section
3. Schedule the task using a date and time or select now
4. press schedule

Push configuration commands to nodes:

YourLab / YourLab

[LAB] Closet 1, Cabinet

planned / LAB

☒ R1

Cisco_IOS

Select all

Load job

Default command job

Load

Delete

name

Default command job

Save

Public

client-type

--any--

description

Issue parameterized commands to the selected

loaded 'Default command job' by 'System'

Commands:

1 your configuration lines here

Evaluate

Scenario:

1 Description <node> Command_job...

2 task = Command_job

3

Schedule:

tomorrow

at

5

05

or

☐ now

change-id:

C000xxxxxx

Schedule

-auto-

server

☒ verbose log

There is no need to worry about if you need to enter the enable or configuration mode or such. This is done for you within our vendor module(s). Of course, the username/password and/or enable password are mandatory to do this. The correct vendor module is chosen based on the information of this specific node as can be seen at the top of the screen.

Templates

Templates can be used in several ways. A few examples:

- To build a tree of templates to generate the complete configuration
- As part of jobs to be vendor agnostic, simplicity and re-usability

- To parse information that is read from the device using show commands or reading the complete configuration, which than can be used to make decisions for changes

A vendor agnostic example explained

Per vendor/family the same template name may exist. This way you may create a 'NTP' template which will hold the configuration lines for each specific vendor/family. By calling the template from the job, using {NTP}, it will find the correct one using the assigned Vendor_type of the specific node it is executing the job on.

This way you have the capability to send out the same job to multiple nodes of different vendors/families, which will all have the correct change as it was designed.

An NTP sub template is provided as an example for Cisco_IOS

Templates (YCE)

Main templates

Sub templates

Port templates

Template	Type	Vendor	Description
global	sub	Cisco_XR	
global	sub	HP_C7	
global	sub	Huawei_S	
global	sub	Junos	
NTP	sub	Cisco_IOS	NTP
yoeSNMP	sub	Cisco_IOS	
yoeVRF	sub	Cisco_IOS	

New

Duplicate

Edit

Delete

Search

Revisions

Template	Vendor	Type	Status	Revision	Remark
NTP	Cisco_IOS	sub	production	2018-10-31 12:30	NTP

Edit Template Revision

Template

NTP

Vendor type

Cisco_IOS

Export

Template status

production

Author

NetYCE

Revision

2018-10-31 12:30

Remark

NTP

Template text:

1

!

NTP

2

ntp server

<Ntp_server1>

prefer

3

|<Ntp_server2>

|ntp server

<Ntp_server2>

Template examples

For several vendors the 'global' sub template has been created as an example. It holds information on several possibilities on how to use it and which variables belong to which section. **NOTE:** This is not a limited list.

Template in jobs

Templates can be called from within jobs or other templates and it looks like this:

{NTP}

where NTP is the template name.

An example has been added to the stored jobs, called 'NTP'.

Node config: **Command jobs** Basic cmd jobs Port config Startup config Node migration Template usage

Push Command jobs

NetYCE support (System) of NetYCE

Push configuration commands to nodes:

YourLab / YourLab [LAB] Closet 1, Cabinet

☒ R1 planned / LAB Cisco_IOS [Select all](#)

Load job

name ☒ Public

client-type

description

loaded 'NTP' by 'NetYCE support'

Commands:

```
1 -- NTP example
2 {NTP}
```

Scenario:

```
1 Description <node> Command_job...
2 task = Command_job
3
```

From:
<https://labs-wiki.netyce.com/> - Technical documentation

Permanent link:
https://labs-wiki.netyce.com/doku.php/guides:user:getting_started

Last update: **2022/06/13 11:25**

