

# Table of Contents

**IPv6 plans**

**IP plans**

**Client types**

**Subnets**

Subnet plan

.....

.....

.....

.....

.....

3

3

3

4

5



# IPv6 plans

IP plans are at the heart of each IP network. The first step after creating a [Client type](#) is the modeling of the IP plans.

IPv6 Plans

Plan...	Plan size	Description	Site mask	# Subnet Ra...
0	48	Custom	::	1

New

Delete

Client type	Name
-------------	------

Subnets

Name	Subnet size	Start IP	End IP	Remark
default-custom	64	::	::ffff:ffff:ffff:ffff	

New



Delete

Subnets Plans

Parameter	Key	Value	Description
<ipv6_A>	offset	::1	Left node interface IP address
<ipv6_A>	topo_pos	A	Assign A-topology to port
<ipv6_B>	offset	::2	Right node interface IP address
<ipv6_B>	topo_pos	B	Assign B-topology to port
<ipv6_gateway>	offset	:::0	Default gateway IP address
<ipv6_loopback>	offset	::0	Loopback is subnet/128 IP address
<ipv6_loopback>	topo_pos	L	Assign L-topology to port

New

Delete

Within the current version of netYCE both  [IPv4](#) and  [IPv6](#) are supported. This page details the creation of IPv6 plans.

# IP plans

IP plans are essentially supernets with a reference number and a subnet mask. The supernet will be divided into one or more subnets (segments). A [client](#) can have one or more supernets associated. This applies for both IPv4 subnets and IPv6 subnets. The two types are not linked, and can be used completely independently.

# Client types

Client type	Name
HYP1	Interhyp LAN
YCE	YCE Example database
C	Cable Service Provider
COG	Cognizant
BEL	Belastingdienst NL
VER	Verzion
A	UCL

A single IPv6 plan can be used with multiple clients. Changing an IPv6 plan should be done with extreme caution. The client types section of the form will show the client types associated with the selected IP-plan.

## Subnets

Create IPv6 subnets

Step 1: Subnet name and size

IPv6 subnet name:\*

Users

Subnet size:\*

Free

Subnet size:\*

96

Step 2: Subnet minimum offset

Minimum offset:\*

<<<

<

0000:0000:0000:0000:0000:0000:0082:0000:0000

>

>>>

Step size:

8

↑↓

Step 3: Subnet maximum offset

Maximum offset:\*

<<<

<

0000:0000:0000:0000:0000:0000:00c1:ffff:ffff

>

>>>


Number of subnets possible in range: 64

Close

Apply

OK

With the subnets section of the form, the IPv6 plans can be segmented.

Using the New button  sign the IPv6 plan subnet add form is opened and one or more ip subnets can be added.

By default, the subnets will be added with a 24 bits subnet. This can be changed by typing the prefix, or using the arrows.


Each subnet must have a name. A good practice is to make a reference to the function of the subnet, such as management, voice, data, ppp etc. When needed a remark can be added.

With '**Minimum offset**' you can select the starting point of your (first) subnet. You can offset this with the single arrows of the offset size per click. If you need to take bigger steps, you can use the double arrows, to make steps increase by a number of bits, equal to the number in the Step\_size field.

With '**Maximum offset**' you select the end-point of your (last) subnet. The single arrows take sequential steps, the double arrows take exponential steps, in order to get to your maximum offset.

The offset fields are intentionally not editable, this makes sure that no crazy offsets can be chosen. To overcome lots of clicking when a big free space exists in the plan, create as big as possible 'Free' ranges so that the first free offset is near the requested one. After creating the latter subnets you can remove the [segments](#) of the 'Free' subnets.

## Subnet plan

In the Subnet plan tab, the subnet can be modeled. Here the Default-gateway, VLAN ID etc can be defined. By clicking  the IPv6 Subnet Plan add form will be opened.

Create IPv6 subnet plan

IPv6 plan id: 1

IPv6 subnet name: Testy

☐ Loopback

☐ Gateway

☐ Point-to-point

☐ Four-corners

☐ Vlan

Loopback reference:

Management reference:

☐ range

☐ fixed

☐ range

☐ fixed

Close

Apply

OK

## IPv6 address offset

When adding an IPv6 address parameter, NetYCE will use an offset from the subnet address. So for example, if the subnet address is ::1 and the offset is ::1, then the resulting address will be ::2.

## Loopback

Loopback will add two parameters. The first is the offset of :: which means 0 bits offset from the

subnet IP and number two is a topology position of **L**. This topology position will be assigned to the port.

## Gateway

Gateway will add one parameter. An IP offset of : : 1

## Point-to-point

Point-to-point will add 8 parameters. Two parameters will have an IP offset of : : 1 and two will have an IP offset of : : 2. Also topology positions A (left), B (right), N (north) and S (south) will be added.

## Four-corners

## Vlan

VLAN will add two parameters. The scope of the VLAN whether it should be Site specific, Client specific or Service specific. The other parameter is the VLAN template. Here a VLAN [configuration template](#) can be used.

When adding a VLAN, the user must make a choice whether to have a range or a fixed VLAN ID.

### Range

When choosing *Range*, two parameters will be added. The minimum- and maximum offset of the VLAN ID. The maximum offset must be higher than the minimum. The range is between 1 and 4094.

### Fixed

When choosing *Fixed*, one parameter will be added. This is the VLAN ID.

## Loopback reference

It is possible to make a named reference to the loopback address. This is useful when using [Service types](#) and using [Templates](#)

## Management reference

In order to force a specific IP address (or range of addresses) it is possible to use a named reference. This reference can be used in the same way as the loopback reference.

## Range

The *Range* will add the *Scope* parameter, the *Topology* parameter and a minimum- maximum offset parameter. The *Topology* parameter can't be modified. The *Scope* can be Site (default) and Global.

## Fixed

The *Fixed* will add the *Scope* parameter, the *Topology* parameter and a fixed offset parameter. The *Topology* and *Site* parameter are the same as the *Range* setting.

From:

<https://labs-wiki.netyce.com/> - **Technical documentation**

Permanent link:

[https://labs-wiki.netyce.com/doku.php/menu:design:ip\\_plans:ipv6\\_plans](https://labs-wiki.netyce.com/doku.php/menu:design:ip_plans:ipv6_plans)

Last update: **2022/04/29 09:05**

